



# EASY START!

# SIMON SWIPE™

**1** With the game off, set the switch on the back to **GAME** ✓.



**2** Hold the unit in one hand like this. Make sure you don't touch the outer ring!



**3** Press this button to turn **ON** the unit.



**4** Touch **RED** once to choose the **LEVELS** game.



**5** Now, touch **RED** again to start the first level.



**6** Watch for the light signal. Now copy it!



# WATCH · REMEMBER · REPEAT

AGE  
**8+**




**7** Then wait for two light signals and remember them. Copy what you saw.



**8** More than one light means **swipe!** Slide your finger across the colours.



**9** The light pattern will get longer each time. Wait until it's done and then copy it.

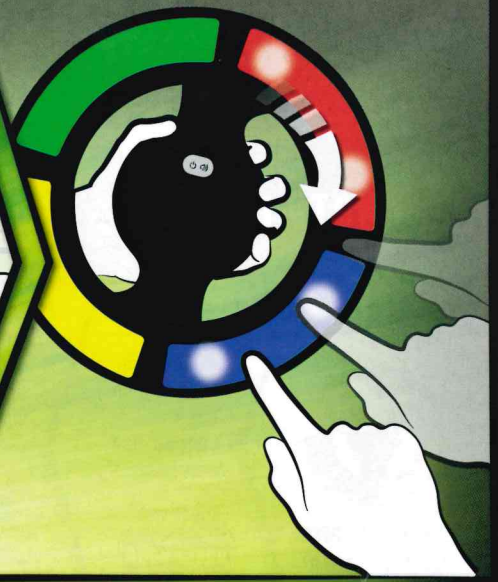


**10** When you hear the music and see the lights flash, you've levelled up! A new light pattern will start.



**11** If you make a mistake, you'll hear a buzzer and the game will end.



**12** SIMON SWIPE will play back your score with lights and sounds and then return you to the menu to select a game.

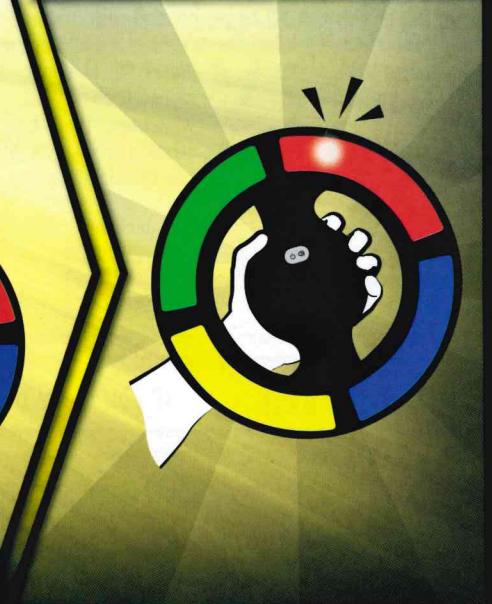

Turn over for the full instructions....

© 2013 Hasbro. All Rights Reserved.

Manufactured by: Hasbro SA, Rue Emile-Boéchat 31, 2800 Delémont CH.

Represented by: Hasbro Europe, 4 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, UK. Hasbro Australia Ltd., Level 2, 37-41 Oxford Street, Epping NSW 2121, Australia. Tel: 1300 138 697. Hasbro NZ (a branch of Hasbro Australia Ltd.), 221 Albany Highway, Auckland, New Zealand. Tel: 0508 828 200 Consumer Services: Hasbro UK Ltd., PO Box 43 Newport NP19 4YD, UK. Tel 00800 22427276.

